COOKTOP PARTS

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

30" ELECTRIC
FREESTANDING
SELF CLEAN RANGE

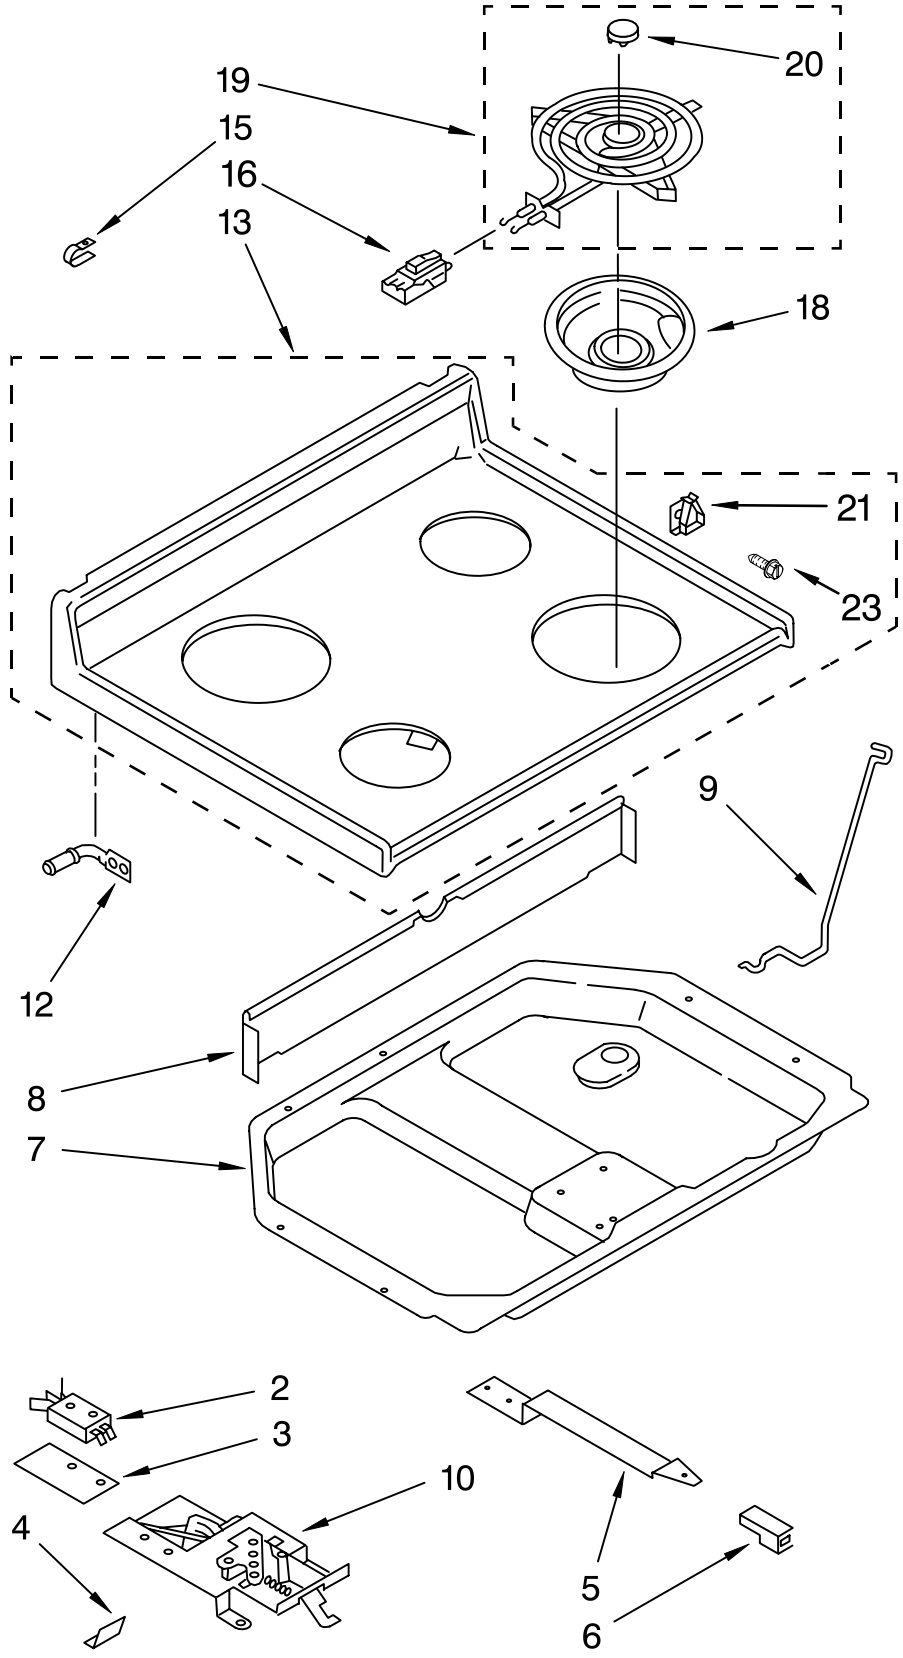

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
2	3183096	Safety Switch
	98106	Screw (2)
3	309245	Insulator, Switch
4	313035	Shield, Latch
	309258	Screw,6−3/8 (2)
5		Handle, Latch
	3169081	Black
	308422	Screw (2)
6		Knob, Latch
	3148684	Black
	155023	Screw, 8−32X1/4"
7	3169186	Burner Box
	309112	Screw (4)
8	307973	Shield, Wiring
	343641	Screw (4)
9	3148659	Rod, Cooktop
	690989	Screw, 10−32 x 1/2
10	3148668	Latch, Lock
12	3169384	Pin, Cooktop (2)
	343641	Screw, 10−16 x 1/2 (4)
13		Cooktop
	3170981	White
	3170982	Almond
	690989	Screw,10−32 x 1/2
15	308605	Strain Relief
	343641	Screw, 10−16 x 1/2
16	312606	Receptacle Clip (4)
	313808	Screw, 6−32 x 1/4 (4)
18		6" Pan Combination
	3150246	Chrome
		8" Pan Combination
	3150247	Chrome
19		Unit, Surface
	660532	6" (2)
	660533	8" (2) (Includes Illus. 20)
20	309195	Medallion (4)
21	3148790	Clip, Hold Down (4)
23	3148789	Fastener (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

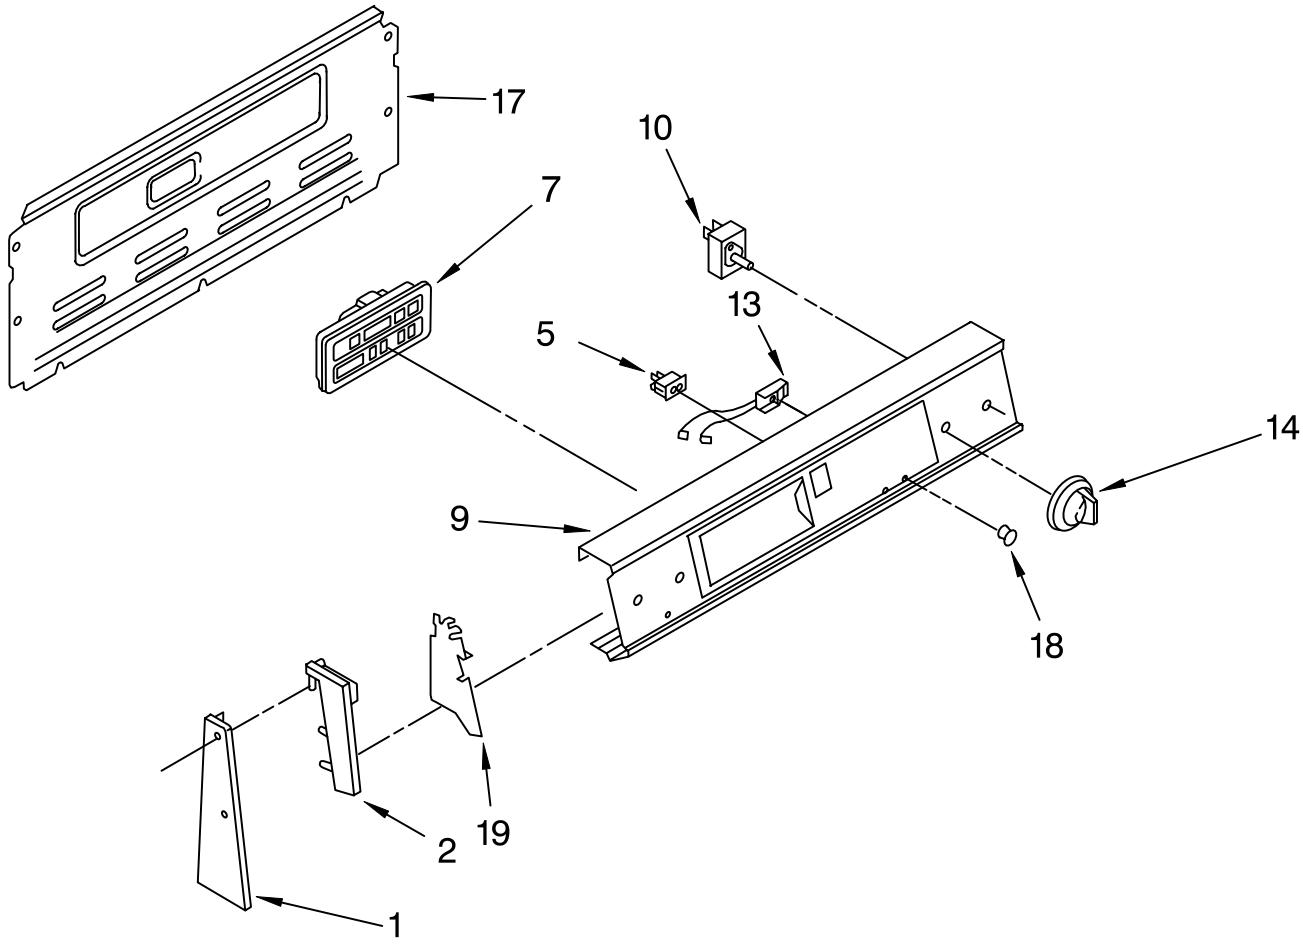

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		End Trim
	3187671	Black − R.H.
	3187672	Black − L.H.
2		End Cap
	3187791	Black − R.H.
	3187792	Black − L.H.
	3150344	Screw (2)
5		Switch, Rocker
	3182717	Black
7		Timer, ERC Control
	3189494	Black
9		Panel, Control
	3189818	Black
	3169366	Screw, 8−18 x 5/8 (4)
10		Switch, Infinite
	3148952	6" Unit (2)
	3148954	8" Unit (2)
	308119	Screw, 8−32 x 1/4 (8)
13	3169457	Indicator Light (2)
14		Knob, Infinite (4)
	3188721	Black
17	3187332	Rear Cover Control Panel
	343641	Screw, 10−16 x 1/2 (8)
18	313101	Lens, Amber (2)
19	313608	Shield, Glass (2)
	246132	Screw, 8A x 3/8 (2)

DOOR AND DRAWER PARTS

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

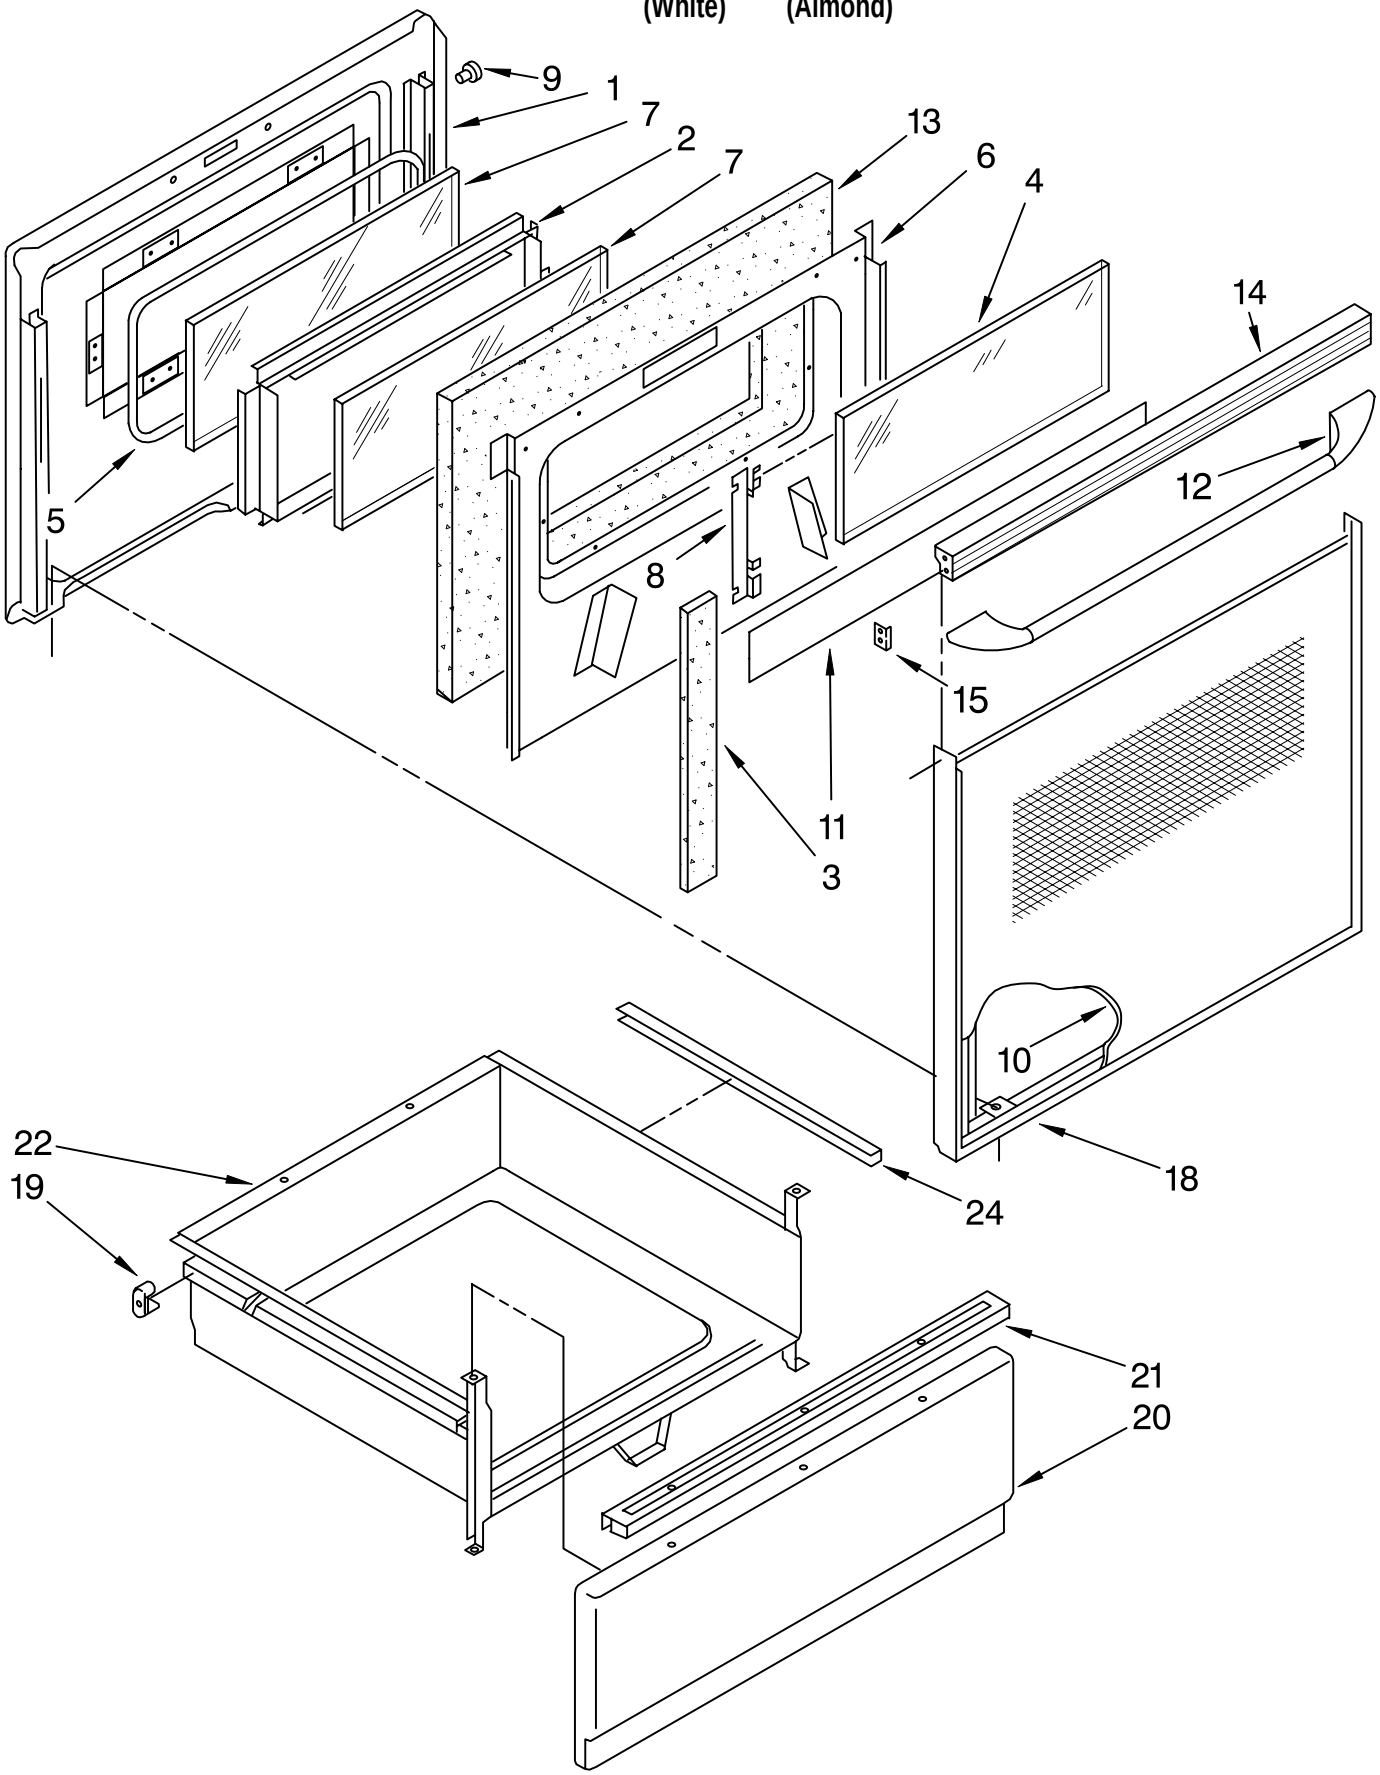

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	3172218	Liner, Oven Door
2	3148234	Frame, Inner Glass
	3185647	Screw (6)
3	3148441	Seal, Foam
4	3169202	Glass, Clear
5	3148183	Seal, Window
6	3148159	Retainer, Insulation
	3185647	Screw (4)
7	3169203	Glass, Inside/Outside
8	3148187	Retainer, Glass
	3185647	Screw (4)
9	3148182	Bumper (4)
10		Outer Glass, Door
	3188739	Black
11	3169191	Foil
12		Handle, Door
	3188695	Black
	3169474	Screw (2)
13	3147951	Insulation, Door
14		Top, Door Vent
	3188692	Black
	3149333	Screw, Black (2)
15	3148282	Clip (2)
18		Frame, Outer Glass
	3188997	Black
	3149333	Screw (3)
	3149253	Screw (4)
19	307980	Glide, Rear
	313349	Screw (2)
20		Panel, Drawer
	3169422	White
	3169423	Almond
	313349	Screw
21		Handle, Drawer
	3169473	White
	3169472	Almond
22	327887	Drawer, Utility
24	309329	Protector, Drawer (2)

UNIT PARTS

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

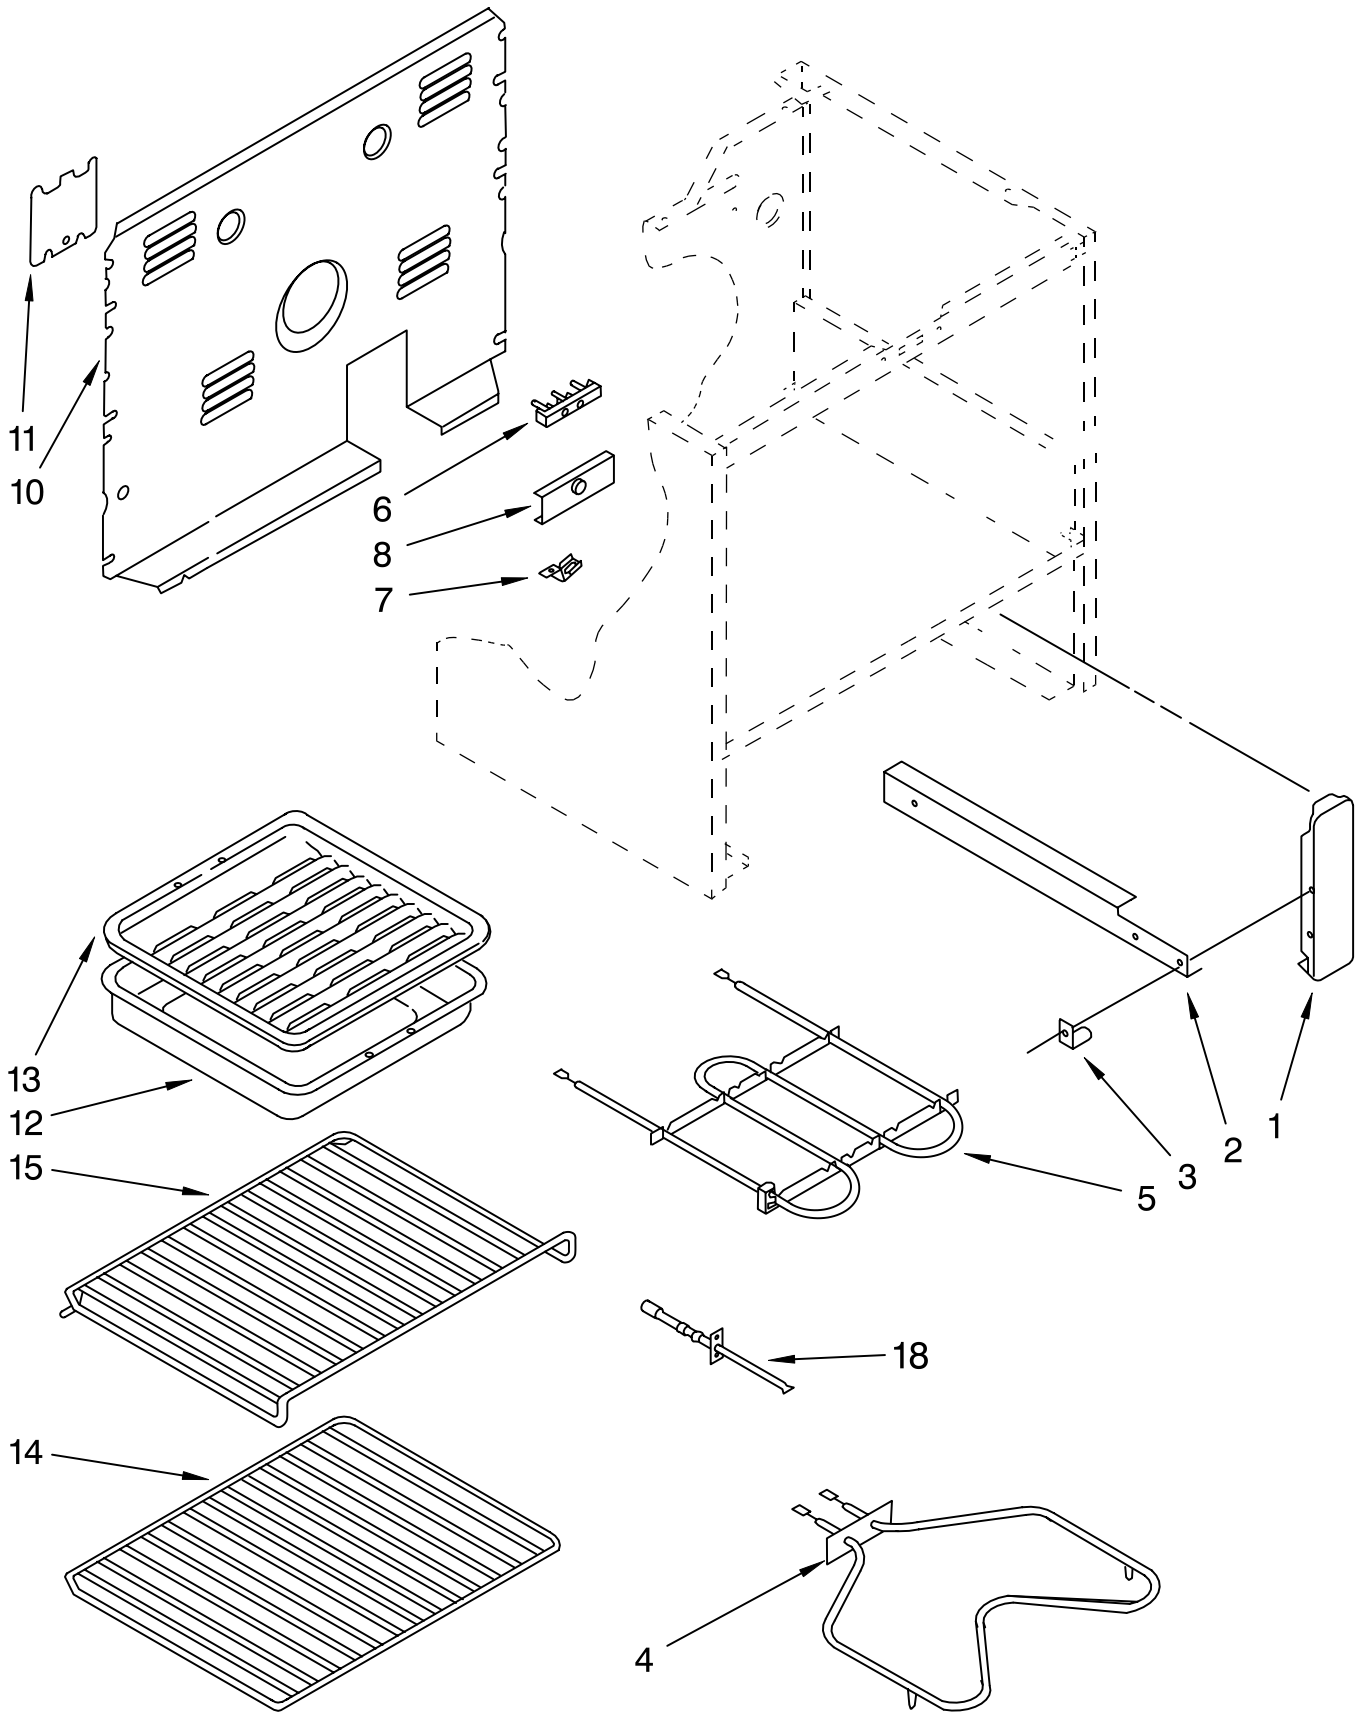

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	3169420	Bracket, Mounting (2)
2	3149255	Rail R.H.
	3149256	Rail L.H. (Includes Illus. 3)
	343641	Screw, 10A x 1/2 (2)
3	3149257	Glide, Front (2)
	307748	Screw (2)
4	661170	Element, Bake
	3150532	Screw, 10−32 x 7/16 (2)
5	660579	Element, Broil
	3150532	Screw, 10−32 x 7/16 (2)
6	258076	Terminal Block
	98884	Screw, 10−16 x 1 (2)
	112432	Nut (6)
7	308498	Ground Strap
	313660	Clip
	690989	Screw, 10−32 x 1/2
8	3150190	Bracket, Service
	343641	Screw, 10−16 x 1/2 (2)
10	3148975	Cover, Rear
	343641	Screw, 10−16 x 1/2 (7)
11	307972	Cover, Service
	343641	Screw, 10−16 x 1/2 (2)
12	3169076	Pan, Broiler
13	3147563	Rack, Broiler
14	308173	Rack, Oven (Straight)
15	308172	Rack, Oven (Offset)
18	3148440	Sensor, Temp.
	98520	Screw (2)

OVEN PARTS

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

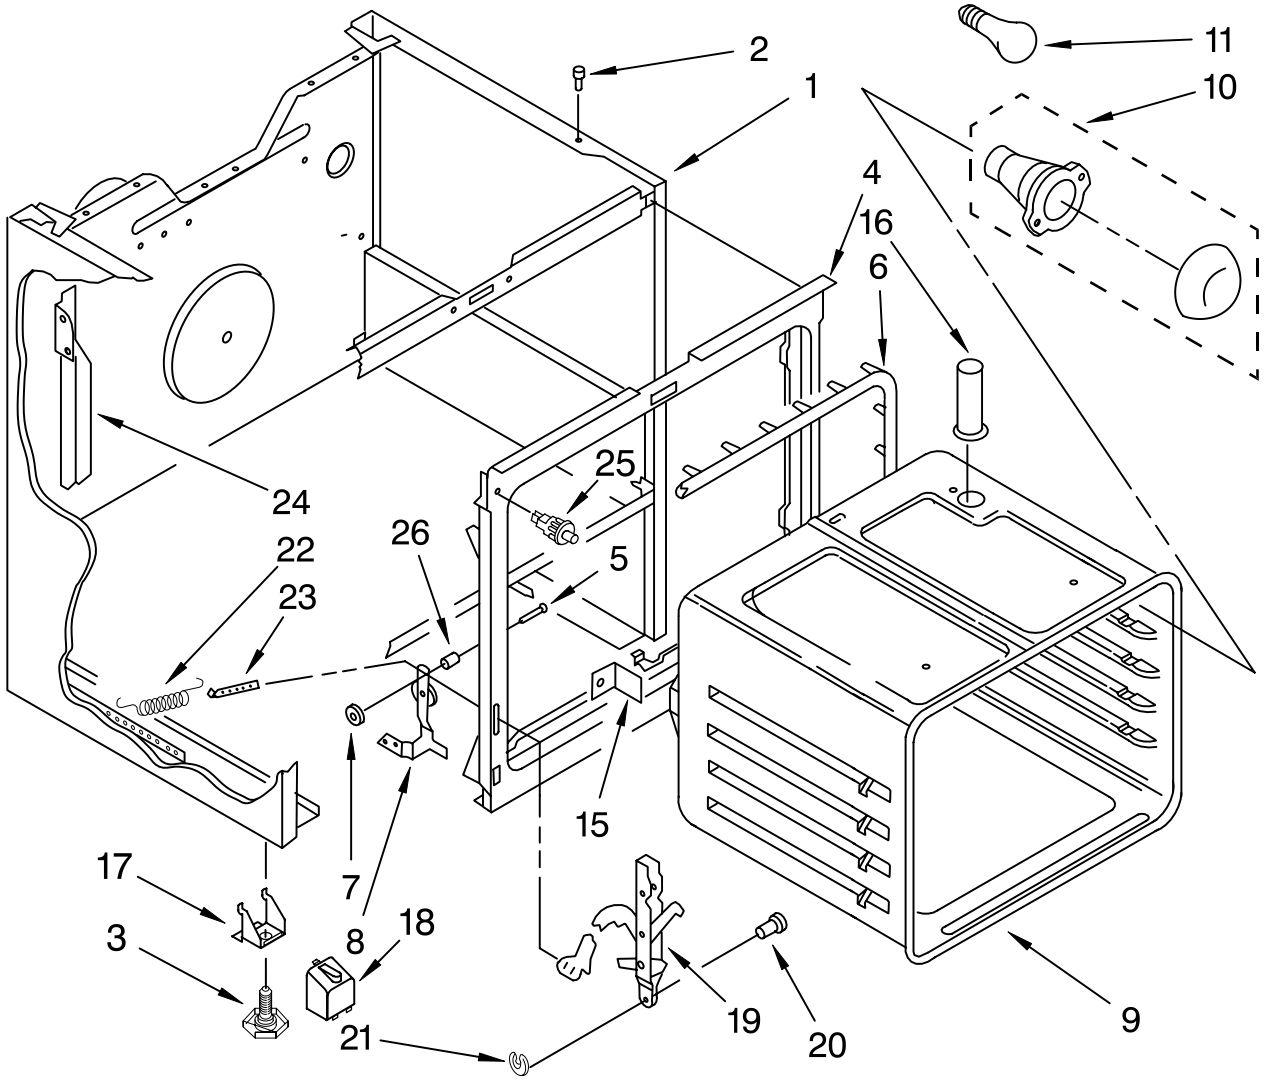

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Main Chassis
	330086	White
	330090	Almond
	690989	Screw, 10−32 x 1/2
2	238614	Bumper, Cooktop (2)
3	3169499	Leg Leveling (4)
4	3176718	Frame, Front
	311056	Screw (2)
	3150537	Screw (1)
5	307985	Pin, Hinge (2)
6	3169251	Seal, Door
7	308306	Pushnut (2)
8	3176710	Hinge, R.H.
	3176711	Hinge, L.H.
	343641	Screw, 10−16 x 1/2 (4)

Illus. No.	Part No.	DESCRIPTION
9	3176611	Oven (30" Pyro)
	311056	Screw (3)
10	3150505	Socket Assembly
11	311255	Bulb, Oven Light
15	311220	Bracket, Oven Mounting
	343641	Screw, 10−16 x 1/2 (4)
16	3169108	Vent, Oven
	307748	Screw, 10A x 1/2 (2)
17	3169418	Support, Foot (2)
	343641	Screw (2)
18	3169448	Cover, Foot (2)
19	3176709	Channel, Arm (2)
20	307986	Hinge Pin (2)
21	307594	Ring, Retainer (2)
22	308126	Spring, Oven Door (2)

Illus. No.	Part No.	DESCRIPTION
23	308125	Anchor, Spring (2)
24	313196	Support, L.H. Post
	313197	Support, R.H. Post
	343641	Screw, 10−16 x 1/2 (4)
25	310345	Switch, Door (2)
26	309111	Snubber, Door (2)

Following Parts Not Illustrated

3169093	Insulation, Wrapper
3169094	Insulation, Oven Back
814091	Anti−Tip Kit (Floor Mount)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

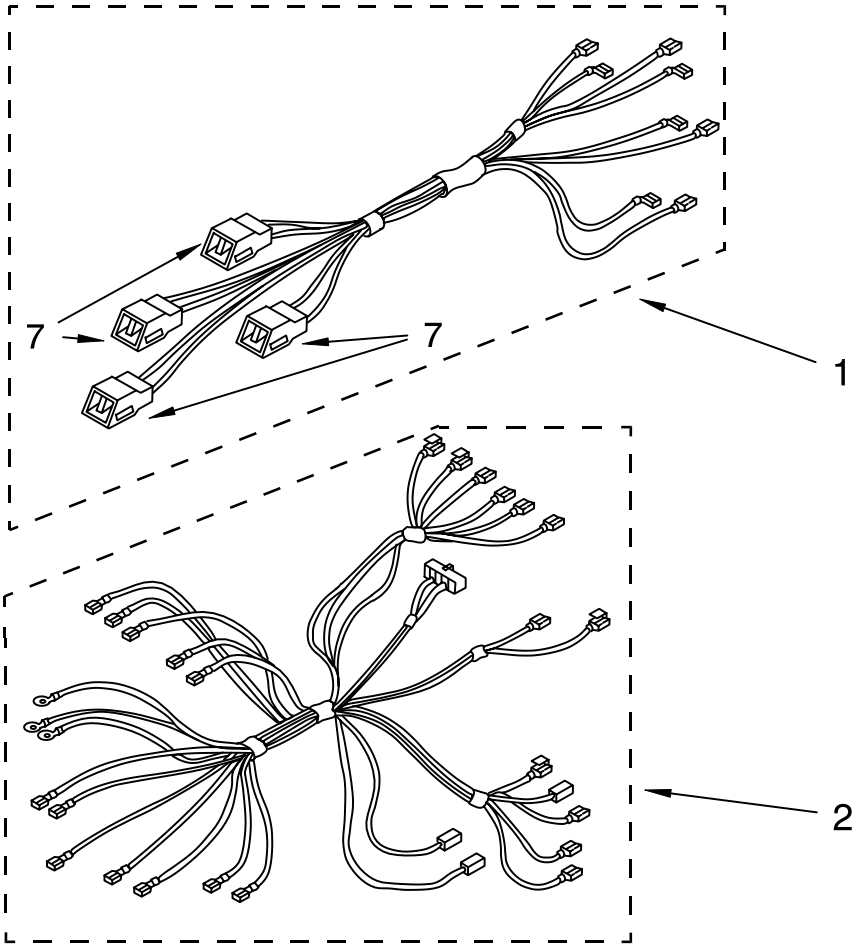

Illus. No.	Part No.	DESCRIPTION
1	3149881	Harness, Wire (Surface Unit)
2	3169562	Harness, Wire (Oven)
4	313154	Harness, Wire (Oven Light)
5	3169563	Harness, Wire (Lock Switch)
6	313438	Harness Clip
7	330031	Receptacle

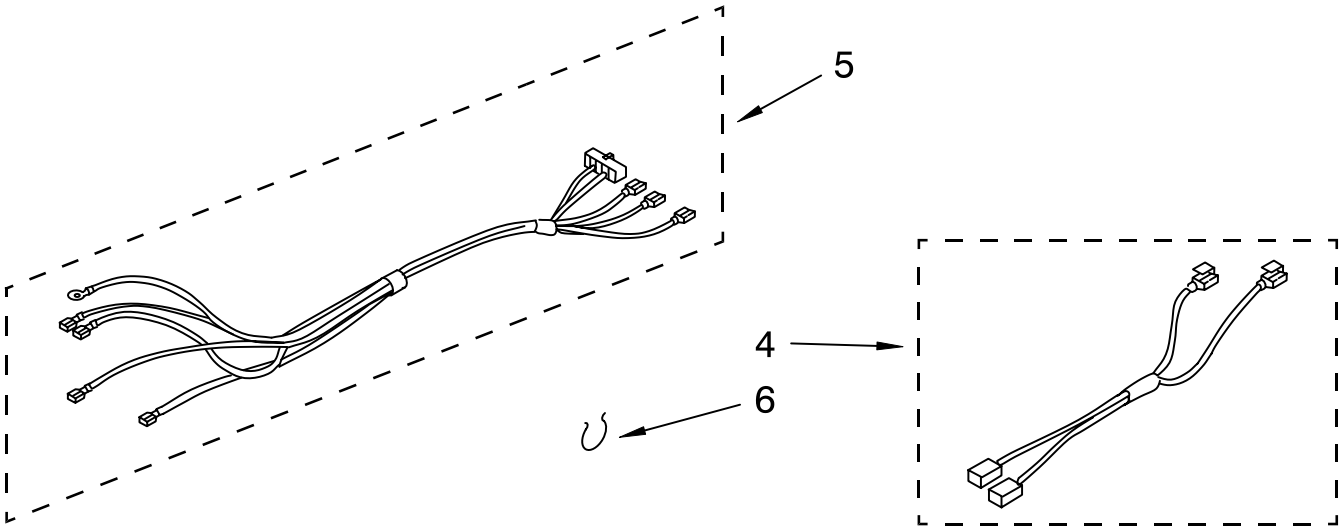

OPTIONAL PARTS NOT INCLUDED

For Model: RF363PXDW0, RF363PXDN0
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
72112	Toast
72113	Platinum
**511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285365	Toast
285366	Platinum
285006	Superior Black
206922	Primer (White)
206925	Leveler (Thinner) (2 oz.)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)
285367	Toast (Uncut)
285368	Platinum (Uncut)

**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

LITERATURE PARTS

LIT3189580	Tech Sheet
LIT3187321	Installation Instructions
LIT3150400	Installation Instr (Templet)
LIT3189873	Guide, Use & Care

Following May Be Purchased

DO−IT−YOURSELF REPAIR MANUALS

LIT677973	Manual, Range internal oven parts

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)
261582	Grease

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')

ANTI−TIP KIT

814234	Anti−Tip Kit (Wall Mount)